



## GLOW S USER MANUAL

### PRODUCT ILLUSTRATION

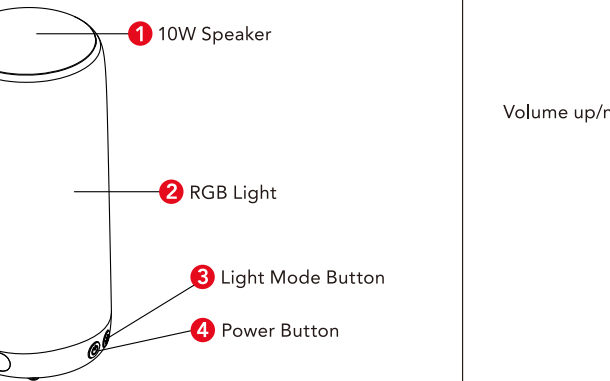

1

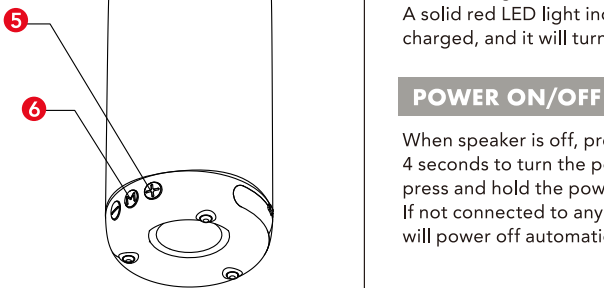

2

### CHARGING

When you open the silicone cover, the USB Type-C charging port is the first to the left. Use the charging cable included in package. Connect the USB Type-C end to Glow S speaker, and connect the USB end to USB power source (wall charger, computer, portable battery, etc.) to charge the speaker. Before using, make sure the Glow S speaker is fully charged. A solid red LED light indicates that the speaker is being charged, and it will turn off when the speaker is fully charged.

### POWER ON/OFF

When speaker is off, press and hold the power button for 4 seconds to turn the power ON. When the speaker is on, press and hold the power button for 3 seconds to turn it OFF. If not connected to any device for a long time, the speaker will power off automatically to save battery life.

2

### BLUETOOTH MODE

After power on, Glow S speaker goes directly to Bluetooth mode if there is no external device connected to it, such as microSD card, AUX cable, or USB driver. If there are external devices connected to it, you will need to press the Mode ("M") button to switch to Bluetooth mode.

### PAIRING

When Glow S is in Bluetooth mode, turn on the Bluetooth settings of your phone, tablet or other Bluetooth enabled device, and search for Bluetooth devices. Locate "KNZ Glow S" and connect to it. Once successfully paired, there will be a tone indicating Bluetooth connection is set up and ready to use.

3

### PAIRING TWO GLOW S SPEAKERS

The true wireless capability of Glow S speaker support two such speakers to be connected as a stereo pair. To pair two Glow S speakers, follow below instructions:

1. Power on both speakers, and make sure they are both not connected to any other Bluetooth devices.
2. Press and hold the Mode ("M") Button on one speaker, and you will hear a tone from both speakers when they are successfully connected.
3. Find "KNZ Glow S" in your phone's Bluetooth settings list and connect to it.

To disconnect the two paired speakers, press and hold the Mode ("M") Button and it disconnects the two linked speakers.

4

### HANDS FREE PHONE CALL

- Press the Power Button to answer an incoming phone call.
- Press and hold the Power Button for 2 seconds to reject an incoming phone call.

### MUSIC PLAY

- Select a song or playlist on your Bluetooth enabled device, Press Power Button to play. Press Power Button again to PAUSE listening.
- Short press the "+" Button to switch to the last song or the beginning of the current song. Short press the "-" button to switch to the next song.

### VOLUME CONTROL

Long press the "+" Button to tune up volume. Long press the "-" Button to tune down volume.

5

### MICROSD/USB/AUX MODES

- Insert MicroSD card into the card slot on back of the speaker. Press the "M" button to switch to microSD mode to play.
- Plug USB drive to the USB port on back of the speaker, and press "M" button to switch to USB mode to play.
- Use the included AUX cable, connect one end to the AUX port on back of the speaker, and connect the other end to AUX supported phone, tablet or computer, then press "M" button to switch to AUX mode to play.

### CHANGE THE LIGHT SHOW PATTERN

Press the Light Mode button to change the pattern of the light show. The last mode in the loop turns lights off. You can keep lights off to get extended battery life.

6

### PRODUCT SPECIFICATIONS

Product Dimension: 8"×3.5"×3.5"  
 Product Weight: 1.4 lbs  
 Battery Type: Rechargeable Lithium polymer battery  
 Charging Time: 2~3 hours  
 Music Play Time with Light Show: 6 hours (medium volume);  
 Music Play Time with Light Off: Up to 10 hours  
 Bluetooth Version: v5.3  
 Wireless Range: 33 ft  
 Speaker Output: 10W

7

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4)Consult the dealer or an experienced radio/TV technician for help. This device complies

8

### WARRANTY

KNZ Technology LLC. warrants this product as free of defects in material, design, and workmanship for the period of one year from the original date of purchase. The warranty is limited to the original purchaser. If during the period of warranty this product proves defective under normal use and service, you should return the product to the retailer from whom it was purchased or to an authorized warranty center. The liability of KNZ Technology LLC. and its appointed repair company is limited to the cost of repair and/or replacement of the product under warranty. Products sent for warranty service

9

with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For further inquiries please visit [www.knztech.com/support](http://www.knztech.com/support).

### WARRANTY

KNZ Technology LLC. warrants this product as free of defects in material, design, and workmanship for the period of one year from the original date of purchase. The warranty is limited to the original purchaser. If during the period of warranty this product proves defective under normal use and service, you should return the product to the retailer from whom it was purchased or to an authorized warranty center. The liability of KNZ Technology LLC. and its appointed repair company is limited to the cost of repair and/or replacement of the product under warranty. Products sent for warranty service

must be accompanied by a copy of the original purchase receipt, the original box, materials, and accessories. All cost associated with the return of the product under warranty are the responsibility of the original purchaser. Shipping and Handling Fee will apply in order for KNZ Technology LLC. to ship out a new/refurbished product to a customer. KNZ Technology LLC. will not assume any responsibility for any loss or damage occurred in shipping.

KNZ is registered trademark of KNZ Technology LLC. All other trademarks are the property of their respective owners. Copyright 2021. All rights reserved. This product is not a toy. Contains small parts, not for children under 3 years.

10