 
 
 

IN THE BOX


Earbuds



 
Charging Case



Ear Tips



Charging Cable



User Manual

PRODUCT FEATURES
Active Noise Cancellation

Powered with advanced 3-mic Hybrid Active Noise Cancellation technology, AS3W provides you a quiet environment by reducing up to 38dB noise.

Ambient mode

When switched to ambient mode, AS3W Earbuds allow you to hear external sounds better and helps you to be more aware of your close surroundings.

Long Battery Life

With noise-cancellation turned off, a single charge powers up to 7 hours music play, and up to 24 hours when used along with the charging case.

Wireless Charging

Powered with the latest wireless charging technology, AS3W is compatible with all Qi-certified wireless charger. Simply place the charging case on any charging pad (or you may choose wired charging using USB-C Cable).

Hall Switch

The hall switch feature enables the earbuds to be powered on when lid is opened and powered off in 3 seconds after lid is closed.

Power On

Open the charging case to power on earbuds.

Pairing

1. To use for the first time, turn on your phone's bluetooth, search for pairing name "AS3W ANC Earbuds" in your device list, and select it to connect.

 
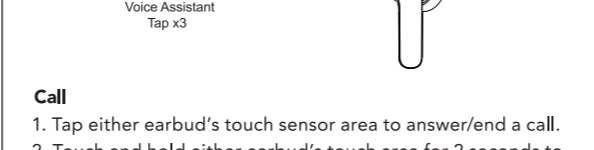 
Pairing Successful


2. After the earbuds are successfully connected with your phone for the first time, it will automatically reconnect when use again.

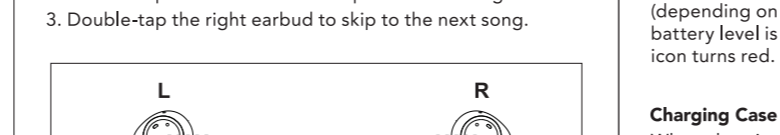 
LED Indicator status

Noise Cancellation Mode

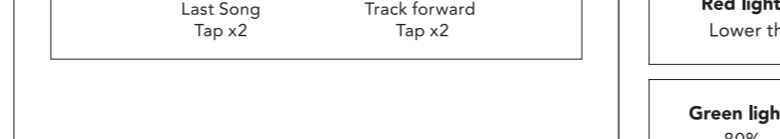 
Touch and hold the sensor area on either side of earbuds for 3 seconds, the working mode will be switched among ANC, Ambient and Normal mode.


Voice Assistant

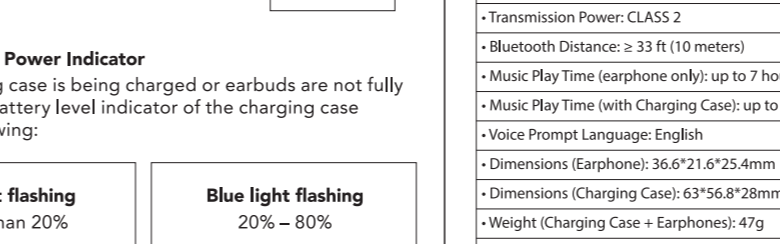 
When connected, triple tap on either earbud's touch sensor area to turn on voice assistant.


Call

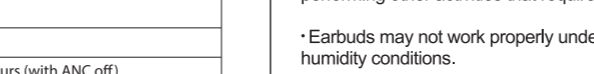
1. Tap either earbud's touch sensor area to answer/end a call.
2. Touch and hold either earbud's touch area for 2 seconds to reject an incoming call.


Music Play

1. Tap either earbud's touch sensor area to play/pause.
2. Double-tap the left earbud to skip to the last song.
3. Double-tap the right earbud to skip to the next song.


Low Power Indication

The battery level of the earbuds can be displayed on smart phones (depending on phone models). When battery level is lower than 20%, the icon turns red.


Charging Case Power Indicator

When charging case is being charged or earbuds are not fully charged, the battery level indicator of the charging case shows as following:

Red light flashing Lower than 20%	Blue light flashing 20% – 80%
Green light flashing 80% – 100%	Solid Green light 100%

Product Specifications

• Bluetooth Pairing Name: AS3W ANC Earphone
• Active Noise Cancellation: 35 dB ± 3 dB
• Driver Size: Φ12mm
• Bluetooth Protocol: HFP, HSP, A2DP, AVRCP
• Transmission Power: CLASS 2
• Bluetooth Distance: ≥ 33 ft (10 meters)
• Music Play Time (earphone only): up to 7 hours (with ANC off)
• Music Play Time (with Charging Case): up to 24 hours
• Voice Prompt Language: English
• Dimensions (Earphone): 36.6*21.6*25.4mm
• Dimensions (Charging Case): 63*56.8*28mm
• Weight (Charging Case + Earphones): 47g
• Weight (Earphone): 10g

 
WARNING

- Using earbuds at high volumes for extended periods of time may result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.
- Do not use while driving a car, cycling, operating machine, or performing other activities that require hearing surrounding sounds.
- Earbuds may not work properly under high temperature or high humidity conditions.
- Do not use any corrosive cleaner/oil to clean the earbuds.
- If the earbuds come in contact with liquids, quickly wipe away.
- If submerged in water, do not turn the earbuds on until them completely dried.
- Liquid submersion voids the warranty.
- Keep the earbuds and packaging out of reach of children.

BATTERY WARNING

- Do not disassemble, strike, crush or put the battery into fire.
- Do not expose the battery to conductive materials, liquids, fire, or high temperatures.
- Do not allow metal objects to touch the two poles of the battery.
- Do not continue to use the battery if it has bulges, leaks, discoloration, odors.
- Do not use the battery after it has been submerged in water.
- If the battery is used improperly, it may explode or leak, causing burns and other personal injuries.
- If the battery leaks, it should be carefully disposed of according to the local laws and regulations concerning battery disposal.

The Directive on Waste Electrical and Electronic equipment (WEEE) which entered into force as European law on 14/02/2014, resulted in a major change in the treatment of electrical equipment at end-of-life. The purpose of the Directive is, as a first priority the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal. The WEEE logo on the product or on its box indication collection for electrical and electronic equipment consist of the crossed-out wheeled bin, as shown below.


FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help. This device complies

WARRANTY

KNZ Technology LLC. warrants this product as free of defects in material, design, and workmanship for the period of one year from the original date of purchase. The warranty is limited to the original purchaser. If during the period of warranty this product proves defective under normal use and service, you should return the product to the retailer from whom it was purchased or to an authorized warranty center. The liability of KNZ Technology LLC. and its appointed repair company is limited to the cost of repair and/or replacement of the product under warranty. Products sent for warranty service

with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For further inquiries please visit www.knztech.com/support.

must be accompanied by a copy of the original purchase receipt, the original box, materials, and accessories. All cost associated with the return of the product under warranty are the responsibility of the original purchaser. Shipping and Handling Fee will apply in order for KNZ Technology LLC. to ship out a new/refurbished product to a customer. KNZ Technology LLC. will not assume any responsibility for any loss or damage occurred in shipping.

KNZ is registered trademark of KNZ Technology LLC. All other trademarks are the property of their respective owners. Copyright 2021. All rights reserved. This product is not a toy. Contains small parts, not for children under 3 years.